



Modification guide for USA

1. Unlock the 12mm dimensions. Click the interior reference planes and move it to the US frame distance. Lock the dimension again.

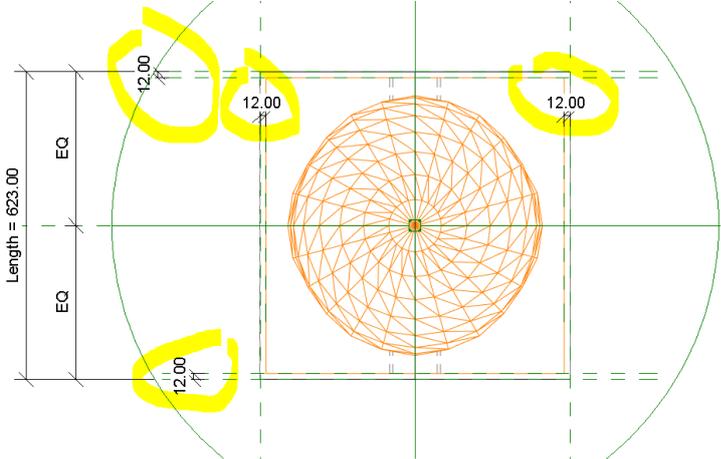

2. In the families, open the ML6 Frame EB profile family.

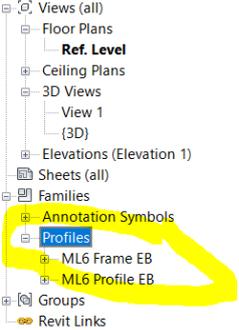

3. Move the profile lines in right direction to the US profile size. Load the profile family back to the lighting family. The frame should now adjust correctly.

