
Installation Instructions – Individual



Important Preinstallation Note: Mounting hardware supplied by others unless noted otherwise.


SLOTLIGHT LED, Flangeless, Wall Mounting

DANGER




Fixture must be installed by a qualified electrician onl . Fixture is intended for installation in accordance with the National Electrical Code, local and federal code specific tions. Disconnect power at electrical panel before servicing. Retain these instructions for maintenance reference.

Fixture is supplied with hanger bracket and canopy attached to the fixture body and additional brackets needed for mounting to junction box. Fixture mounts to a wall mounted 4" square junction box (mounted flush) at intervals along the length (by others). Feed point (incoming power) occurs 6" from end of fixture. Center to Center for feed and support junction box locations vary with each configuration. Refer to layout drawing to confirm your installation. (Example below).

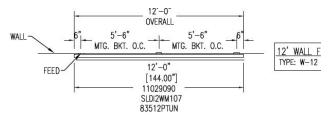


With junction boxes at desired height and center spacing, attach fixture mounting bracket (supplied with fixture) to j-box using fasteners (by others).

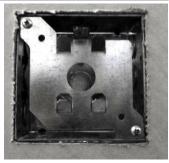

Raise fixture up and toward wall onte 3 dual hook of hanger bracket (on wall box) to hang fixture fixture. Connect corresponding wires (not shown).



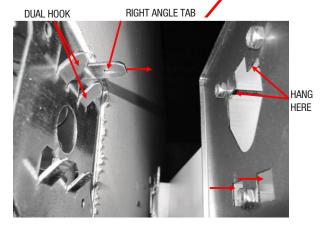

Align right angle tab with chamfered hole on fixture 4 and secure with flat head screw (supplied)



Proper installation places fixture canopy tight to wall with no gaps.

